

Price labeller OPEN & Labels



LABELLERS	DESCRIPTION
-----------	-------------

22 x 12 MM - 1 500 labels/roll - 42 rolls/case

OP-P6-\$	Labeller 2212 1 line 6 characters
OP-S6	Labeller 2212 1 line 6 characters best before
OP-P8	Labeller 2212 1 line 8 characters



OP-2212B-CR



OP-2212B-CR-M/A



OP-2212FR-CR



OP-2212FR-CR-SPE

22 x 16 MM - 1 000 labels/roll - 42 rolls/case

OP-P14	Labeller 2216 2 lines 7 characters
OP-P14-\$DATE	Labeller 2216 2 lines 7 characters



OP-2216B-CR



OP-2216B-CR-DF-M/A



OP-2216B-CR-M/A



OP-2216FR-CR

26 x 16 MM - 1 000 labels/roll - 36 rolls/case

OP-C20	Labeller 2616 2 lines 10 characters
OP-S16	Labeller 2616 2 lines 8 characters
OP-M6	Labeller 2616R 1 line 6 big characters



OP-2616B-CR-R



OP-2616FR-CR



OP-2616FR-CR-SPE

26 x 19 MM - 1 000 labels/roll - 36 rolls/case

OP-D20	Price labeller 10 characters top and bottom
--------	---



OP-2619B-CR-EMB-M/A

29 x 28 MM - 700 labels/roll - 30 rolls/case

OP-MT7	Labeller 7 characters 1 line
OP-MX77	Labeller 7 characters 2 lines



OP-2928FR-CR



OP-2928FR-CR-SPE

37 x 19 MM - 700 labels/roll - 25 rolls/case

OP-MX7	Labeller 7 characters 1 line
--------	------------------------------



OP-3719FR-CR



OP-3719FR-CP-SPE

INK	DESCRIPTION
-----	-------------

OP-ENC-OP1-2	Ink Open 1 ligne or 2 lines
OP-ENC-3L	Ink Open 3 lines

Price labeller OPEN & Labels

INSTRUCTIONS

LOADING INSTRUCTIONS

1. Open the baseplate by sliding the two plastic grips, one on each side of the machine, towards you. The baseplate will fall open automatically.
2. Open the label-roll holder by pulling it upwards slightly.
3. Unroll approx. a 20 cm strip of label and insert it into the top of the machine guiding the strip gently until it comes out of the bottom.
4. Insert the label-roll into the roll-holder and then close it.
5. Close the baseplate making sure that at least 15 cm of the label strip remains free.

HOW TO INSERT THE LABEL STRIP

6. Insert this loose end of the label strip into the slot behind the roller, pushing slightly. At the same time squeeze and release the handgrip several times until the first label appears, correctly printed.

PRINT-SETTING

7. Move the arrow on the display to the required position by pulling the settings knob out gently. Turn the setting knob until the required figure for that column appears on the display.
8. Return the setting knob to its original position by pushing it towards the machine.

PRINT-CENTERING

9. To centre the printing, you must adjust the guide-plate inside the machine. Loosen the screw and move the guide-plate up or down along the base, as required. Having set the position, tighten the screw.

INK-ROLLER REPLACEMENT

10. Pull lightly downwards on the front of the machine to open the small front protection plate which will reveal the ink-roller.
11. Use the special key and remove the old ink-roller. Hook the new roller onto the side hooks of the new ink-roller holder. Close the front protection plate.

1.



2.



3.



4.



5.



6.



7.



8.



9.



10.



11.

